

## **Absorbent**

## **Trucker Emergency Spill Kit**

(Absorbs up to 9 gallons / 34 liters)

### **Absorbent W # 55052 / Absorbent GP Kit # 35052**

The Trucker Emergency Spill Kit is designed for that quick response while on the move. It is compact and lightweight, easy hand carried and small enough for easy stowage. Packaged in a clear polyethylene bag with carrying handle, this kit is ideal for use with 1)Commercial vehicles 2)Cranes, 3)loaders, 4)backhoes, 5)mobile equipment , 6) recreational vehicles, 7) trailers, and 8)boats. The Trucker Emergency Spill Kit is available in either **Absorbent W** or **Absorbent GP**.

### **Trucker Spill Kit Contents**

1-Poly Bag, 26”h X 18”w X 6”d

1-Absorbent Sock, 4” X 10’ (Absorbent W Kit only)

1-Absorbent Sock, 3” X 8’ (Absorbent GP kit only)

2-Spill –Dri 6 liter bags (Absorbent GP kit only)

2-Absorbent W Particulate, 10 qt bags ( Absorbent W kit only)


3- Absorbent GP Natural Fiber Pads, 16” X 20” X 1/4” (6mm)(Absorbent GP kit only)

1 – Disposal Bag

2 – Pair Disposal Gloves

### **APPLICATIONS:**

- Construction Sites
- Public Works
- Rescue Vehicles
- Tow Trucks
- Fuel delivery trucks
- Police cars, ambulances
- Transports
- Garbage trucks
- Commercial vehicles

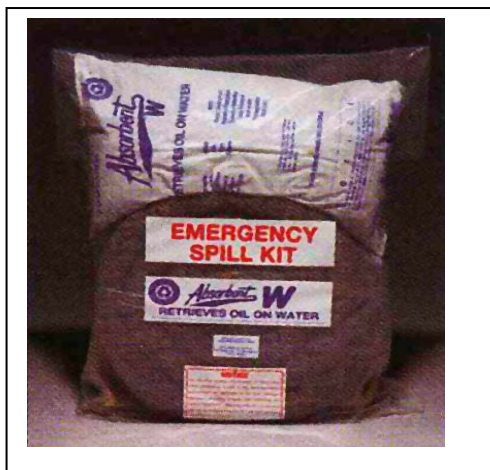

**Warning:** Inorganic acids, caustics, hydrazines and hydrazides are not suitable for use with wood fiber/cellulose absorbents. Dispose of only in accordance with local, state, federal regulations.